


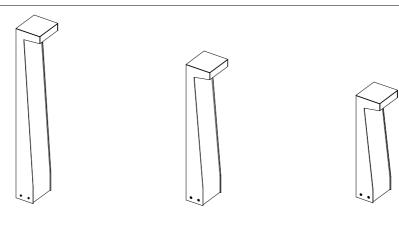

OPERATION TEMPERATURE





INSTALLATION INSTRUCTIONS

DISCLAIMER

 


 




 
Please read all instructions before beginning installation:

 
- 1. Turn off electrical Power before starting the installation of the light fixture.
- 2. The feeding voltage must not exceed the specified fixture voltage.
- 3. This product must be installed by an eligible electrician.
- 4. Make sure the luminaire is mounted to a secure structure. Mounting the fixture in inappropriate way could lead to serious injury.
- 5. This luminaire is class 1, it must be earthed in a reliable way.
- 6. Wear gloves and safety glasses at all times when removing the luminaire from carton,installing, servicing or performing maintenance

 













Dimensions in mm



1.Prepare the ground and the cable with a proper drainage system Cable Type Non Dimmable Application Note L/N/PE Power H07RN F 3G1.0 mm² Power & Control H07RN F 5G1.0 mm² L/N/PE/DA/DA DALI H07RN F 3G1.0 mm² L/N/PE Power 1-10V H07RN F 2x1.0 mm² DIM+ / DIM-Control


Drainage

2.Make 4 holes in the surface for M6X50

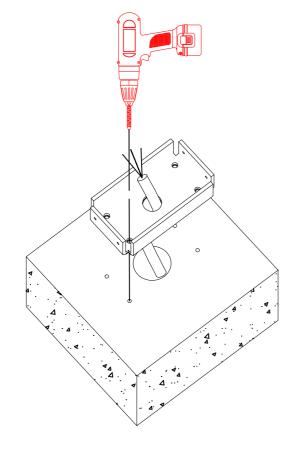




3.insert Power feeding and control canle in the base

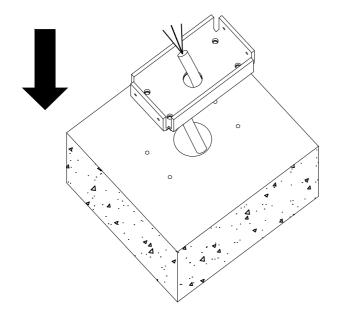

4.Screw in M6x50 screws Qty 4 (provided by installer)

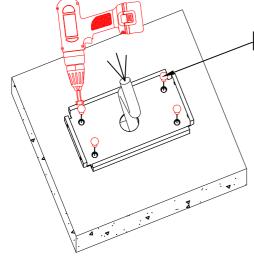

M6x50 provided by installer



