
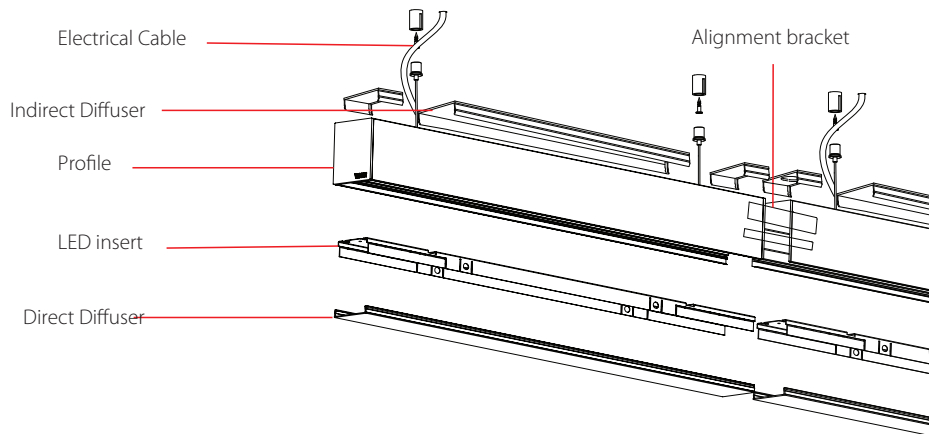
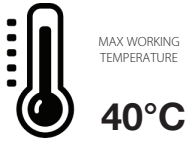


LIGHTWAY 5 - PENDANT DIRECT/INDIRECT

Product Installation Guide

 
WARNING:

THE SAFETY OF THIS FIXTURE IS GUARANTEED ONLY WHEN COMPLYING WITH THE FOLLOWING INSTRUCTIONS

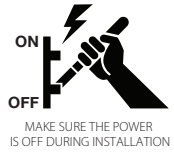

FOLLOW THE BELOW STEPS TO INSURE A PROPER INSTALLATION


STEP 1: Unscrew the suspension parts.



STEP 2: Fix the suspension onto the ceiling.



Applicable surfaces:

Stone
Concrete
Metal
Wood

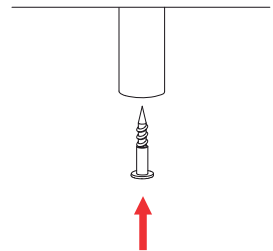

STEP 3: Installation of profile

- A- Screw on the screws slightly to stop the lateral movement of the bracket.
- B - Remove the top cover from the profile using the scraper .
- C - Insert the electrical cable into the profile, the assemble the cover.
- D - Connect the mains cable to the input terminal block and control when applicable.

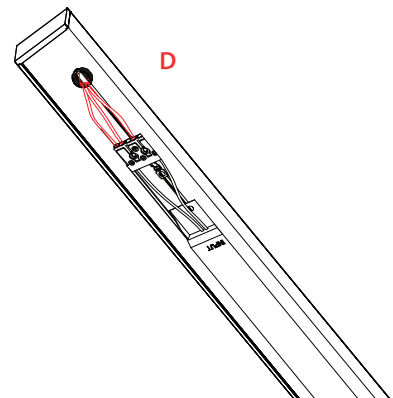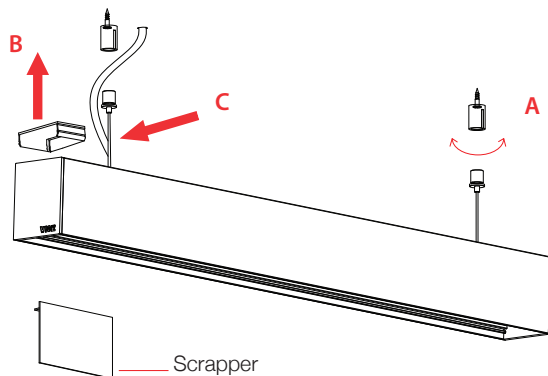

LIGHTWAY 5 - PENDANT DIRECT/INDIRECT

Product Installation Guide

NOTE:


- 1 - Always wear cotton gloves to avoid fingerprints mark on the product.
- 2 - Make sure to place all dismounted items in a safe and clean area to avoid any possible damage.
- 3 - LED should be protected from any possible electrostatic discharge (ESD) source.

For a continuous run:

Connect the feeding connectors together to provide a through wiring for the power and control when applicable

Fold in the alignment plates on the dotted lines, insert the stems in their allocated slots and screw them to the profile.

Unfold the plates to their original position.

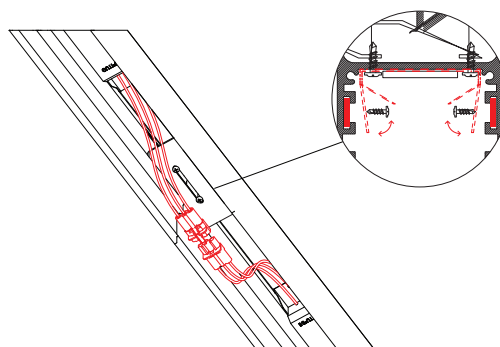

Terminal block options:

1 1 - Dim+ 2 - Dim- ⊕- Earth N - Neutral 3 - Line	
2 1 - Dim+ 2 - Dim- ⊕- Earth N - Neutral 3 - Line	
3 1 - Dim+ 2 - Dim- ⊕- Earth N - Neutral 3 - Line	

* Apply silicon on the edges of the profile after joining them to fill all gaps and remove light spill.

* Make sure not to exceed the maximum allowable running length according to the below table:

Maximum running length through 1 feeding input						
System	Voltage	Power				
		L1 10 W/m	L2 15 W/m	L3 22 W/m	L4 30 W/m	L5 42 W/m
UL	120VAC - 60 Hz	135 ft	100 ft	70 ft	50 ft	36 ft
CE	220VAC - 50/60 Hz	62 m	45 m	33 m	23 m	17 m

WARNING :

- THE FEEDING VOLTAGE SHOULD NOT EXCEED THE SPECIFIED FIXTURE VOLTAGE.
- DO NOT INSTALL THE FIXTURE IF DAMAGED
- UNAUTHORIZED REPAIRS OR MODIFICATIONS WILL VOID WARRANTY