 


Product Installation guide

IP67



50°C

RECOMMENDED
OPERATION TEMPERATURE




MAKE SURE THE POWER
IS OFF DURING INSTALLATION



220-240V~
50/60 Hz



RISK OF FIRE AND
ELECTRICAL SHOCK

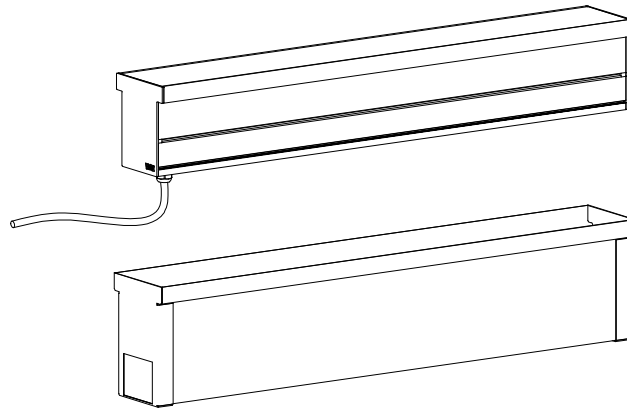



INSTALLATION INSTRUCTIONS

DISCLAIMER

Please read all instructions before beginning installation:

1. Turn off electrical power before starting the installation of the light fixture.
2. The feeding voltage must not exceed the specified fixture voltage.
3. This product must be installed by an eligible electrician.
4. Make sure the luminaire is mounted to a secure structure. Mounting the fixture in inappropriate way could lead to serious injury.
5. This luminaire is class 1, it must be earthed in a reliable way.
6. Wear gloves and safety glasses at all times when removing the luminaire from carton, installing, servicing or performing maintenance
7. Do not install damaged product! This luminaire is properly packed to avoid being damaged during transit. Inspect to confirm before installation. Any damaged or broken part during or after assembly should be replaced.
8. Unauthorized repairs or modifications will void warranty.

Section View:

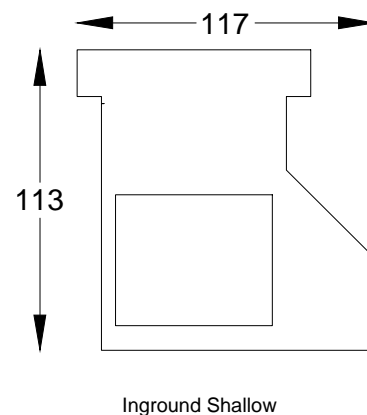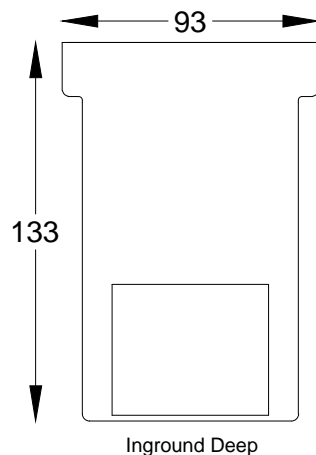


Dimensions in mm

Product Installation guide


Housing Dimension						
Length Code	Inground Deep			Inground Shallow		
	Length	Width	Depth	Length	Width	Depth
30 cm	317 mm	93 mm	133 mm	372 mm	117 mm	113 mm
60 cm	611 mm	93 mm	133 mm	666 mm	117 mm	113 mm
90 cm	905 mm	93 mm	133 mm	960 mm	117 mm	113 mm
120 cm	1199 mm	93 mm	133 mm	1254 mm	117 mm	113 mm
150 cm	1493 mm	93 mm	133 mm	1548 mm	117 mm	113 mm

Installing the housing

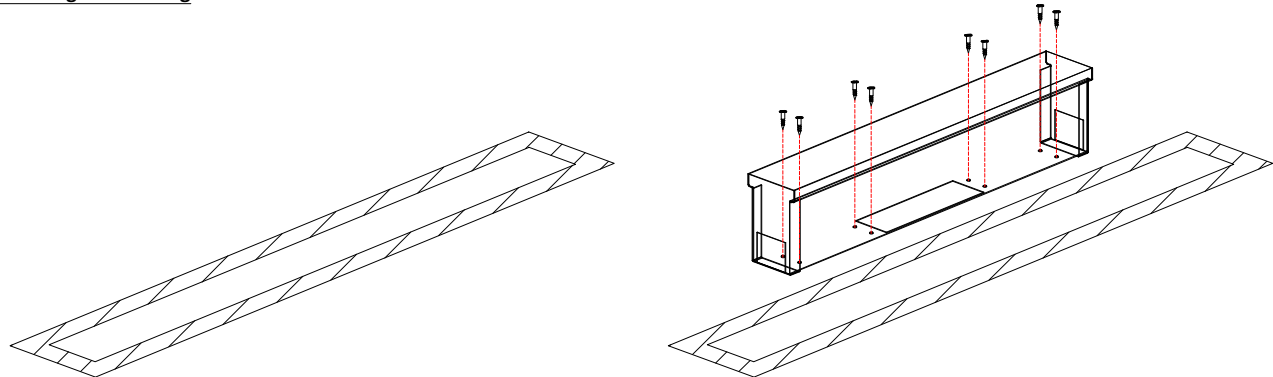

1 Dig in the Ground to get enough space to install the housing.


2 Put the housing in the hole and fix it with screws* (* Optional)

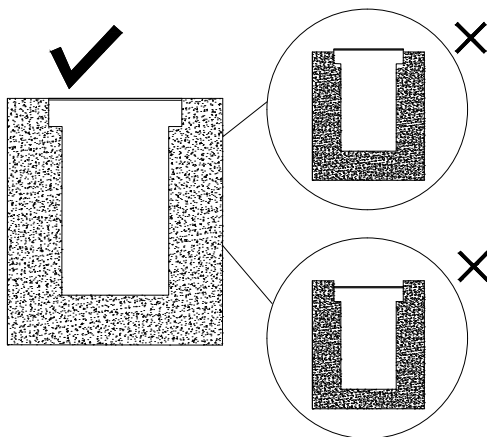

3 Make Sure the surface of the housing is flushed with the ground



A proper water drainage system is required with a minimum rate of 0.08 GAL (0.33 Liter) per minute per meter as shown below:

Length	Minimum Drainage Rate
1 ft (30cm)	0.026 gal/min (0.1 l/min)
2 ft (60cm)	0.053 gal/min (0.2 l/min)
3 ft (90 cm)	0.079 gal/min (0.3 l/min)
4 ft (120 cm)	0.105 gal/min (0.4 l/min)
5 ft (150 cm)	0.132 gal/min (0.5 l/min)

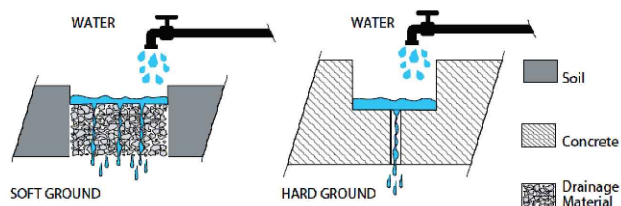

WARNING :
FAILURE TO PROVIDE
PROPER DRAINAGE
WILL VOID PRODUCT
WARRANTY

Product Installation guide

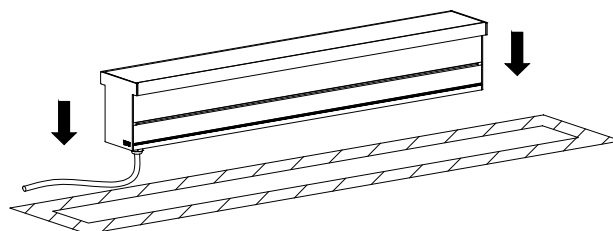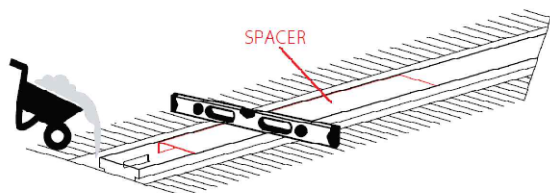


4 Cover with the spacer provided with the luminaire to prevent any debris from getting into the housing.

5 Put the fixture in the housing.

Electrical Wiring for continuous run

For Non Dimmable

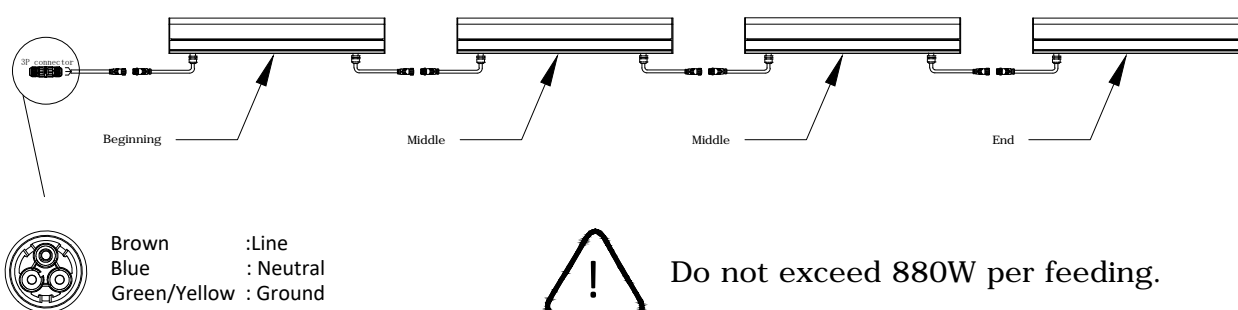

Electrical Wiring for continuous run

For DALI or 0/1-10V Dimmable

