


LIGHTWAY 6 - PENDANT DIRECT & INDIRECT

Product Installation Guide


WARNING:

THE SAFETY OF THIS FIXTURE IS GUARANTEED ONLY WHEN COMPLYING WITH THE FOLLOWING INSTRUCTIONS

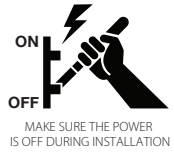

MAX WORKING
TEMPERATURE


40°C

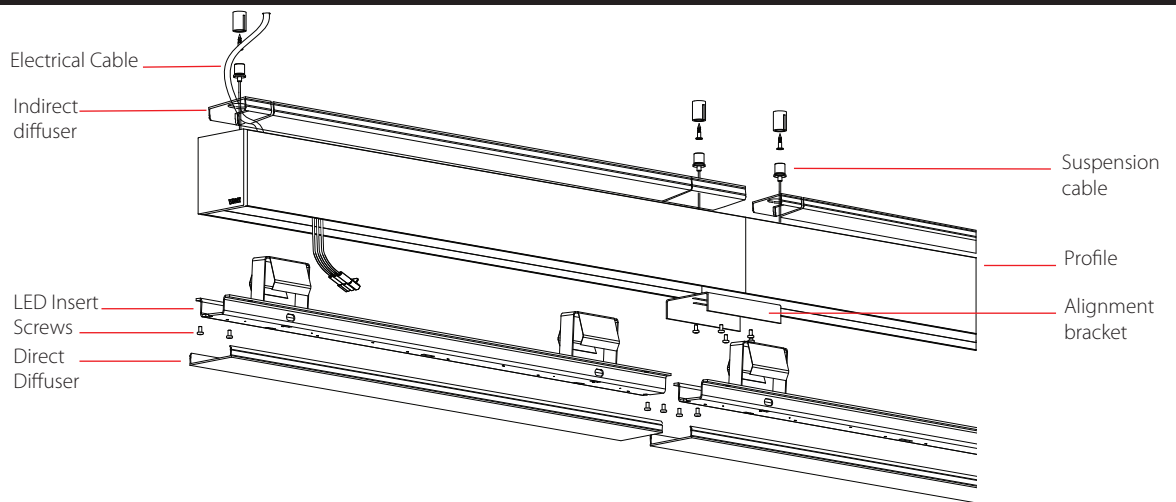

FOLLOW THE BELOW STEPS TO INSURE A PROPER INSTALLATION

STEP 1: Disassemble the luminaire

- A - Use the provided scraper to remove the optic.
- B - Dismantle the internal indirect part, to un-plug the feeding connector.

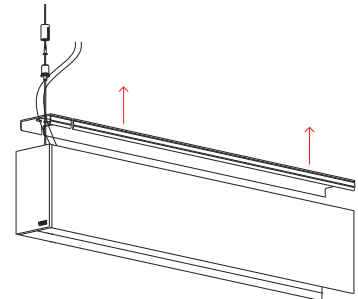


STEP 2: Install the Suspension cable

Applicable surface:

Stone
Concrete
Metal
Wood




Unscrew the suspension parts.

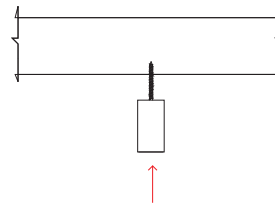


Screw the upper part of the suspension on the ceiling.


STEP 3: Install the Profile and electrical cables.

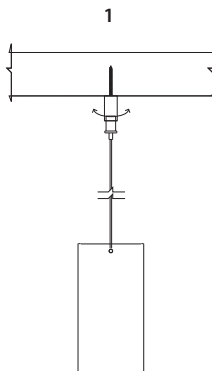

Reassembly the suspension kit.

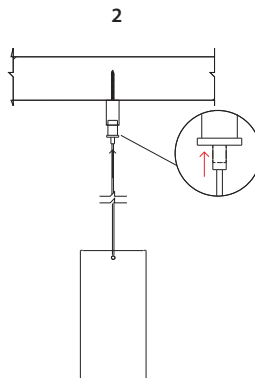

Use the "stop and go" to adjust the height of the suspension cable.

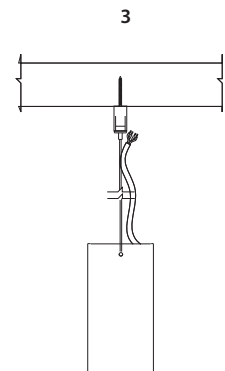

Install the electrical cable.

LIGHTWAY 6 - PENDANT DIRECT & INDIRECT

Product Installation Guide

REFER TO THE TABLE FOR TYPICAL INSTALLATION PARAMETERS


Optic type	Distance between wall and fitting
Grazing	Between 10cm and 15cm (4" and 6") Depending on the wall texture
Washing	Between 1/5 and 1/6 of the wall height to be washed.
Other	Depending on the desired effect.

NOTE:

- 1 - Always wear cotton gloves to avoid fingerprints mark on the product.
- 2 - Make sure to place all dismantled items in a safe and clean area to avoid any possible damage.
- 3 - LED should be protected from any possible electrostatic discharge (ESD) source.

STEP 3 (OPTIONAL): in case of continues system ,Dismantle the internal direct part to insert the alignment

- A - Use the provided scrapper to remove the optic.
- B - Dismantle the internal part , unlock the safety cable hook that hangs the optic with the LED insert and un-plug the feeding connector.

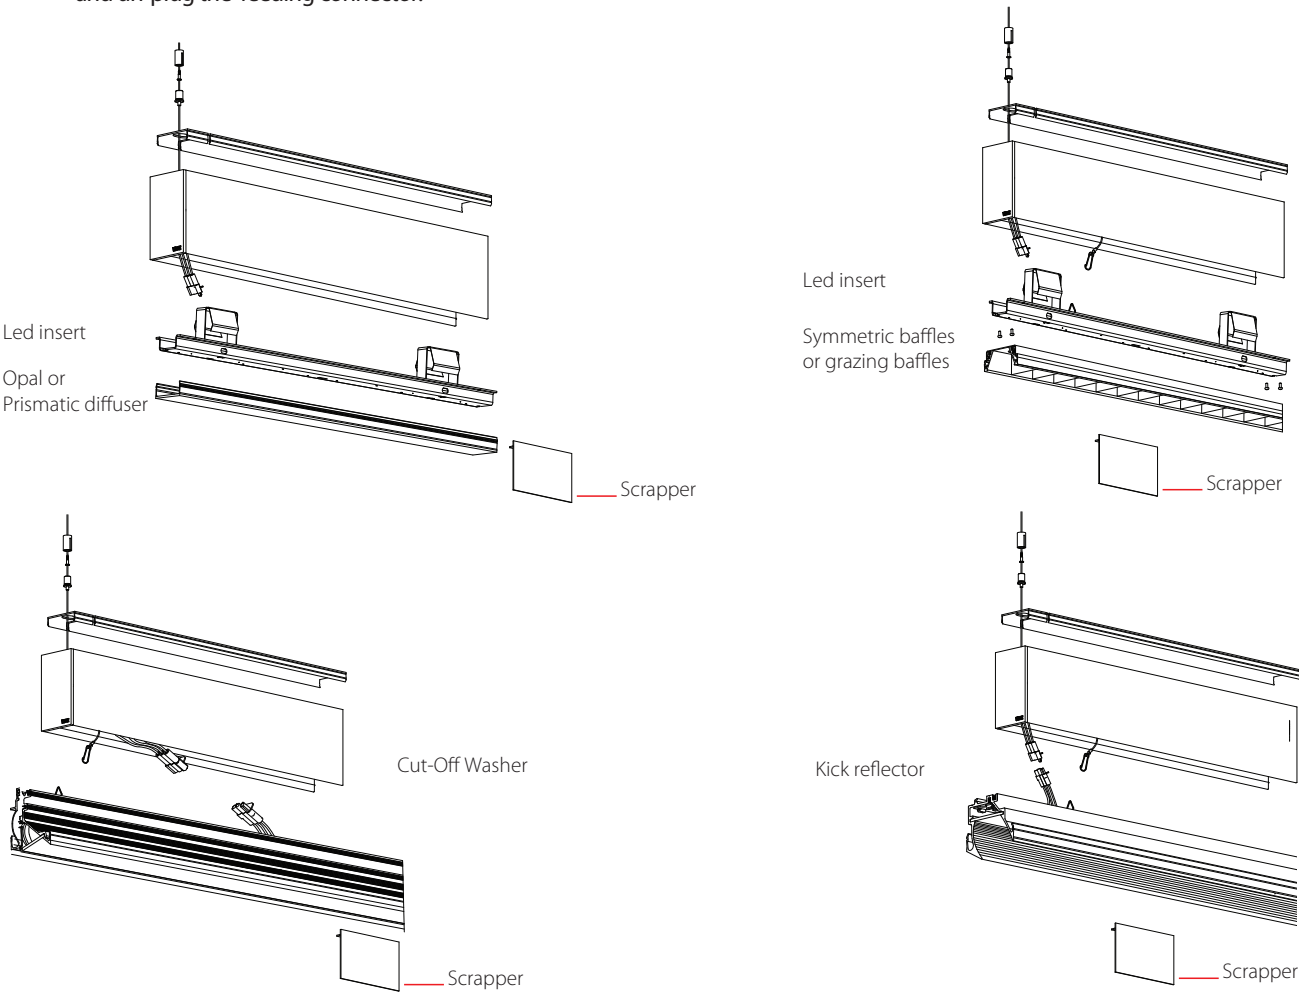

* Make sure not to exceed the maximum allowable running length according to the below table:



Maximum running length through 1 feeding input												
System	Voltage	Power										
		L1 10 W/m	L2 15 W/m	L3 22 W/m	L4 30 W/m	L5 42 W/m	P1 20 W/m	P2 30 W/m	P3 42 W/m	M1 28 W/m	M2 40 W/m	M3 56 W/m
UL	120V~ 60 Hz	135 ft	100 ft	70 ft	50 ft	36 ft	70 ft	50 ft	36 ft	54 ft	38 ft	27 ft
CE	220-240V~ 50/60 Hz	62 m	45 m	33 m	23 m	17 m	33 m	23 m	17 m	25 m	18 m	13 m

LIGHTWAY 6 - PENDANT DIRECT & INDIRECT


Product Installation Guide

For continuous system:

- A- Align both profiles using the alignment bracket.
- B- Screw the alignment bracket to fix the profiles.

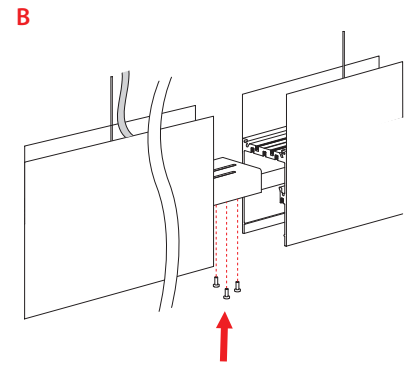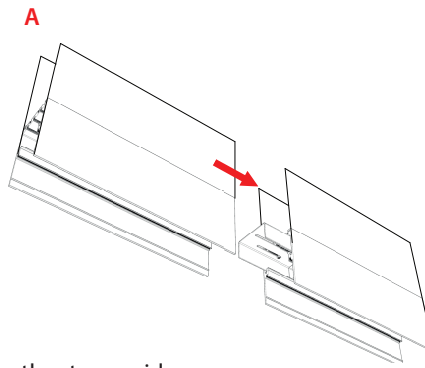


- C - Connect the feeding connectors together to provide a through wiring for the power and control when applicable

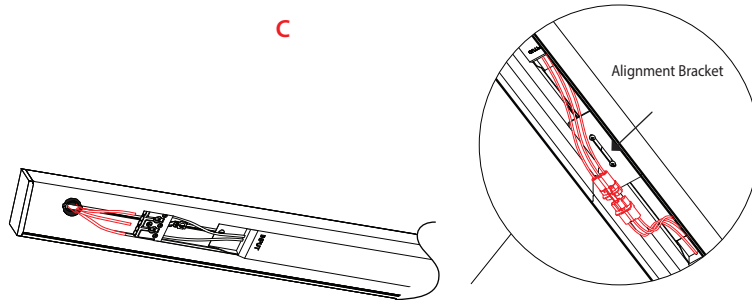

Terminal block options :

1 1 - Direct 2 - Indirect ⊕ - Earth N - Neutral 3 - Line		2 1 - Dim+ 2 - Dim- ⊕ - Earth N - Neutral 3 - Line		3 1 - Direct 2 - Indirect ⊕ - Earth N - Neutral 3 - Line	
--	--	--	--	--	--

STEP 4: Clip-in the indirect diffuser by making sure to have both markers (lens and the internal profile) on the same side for right positioning.

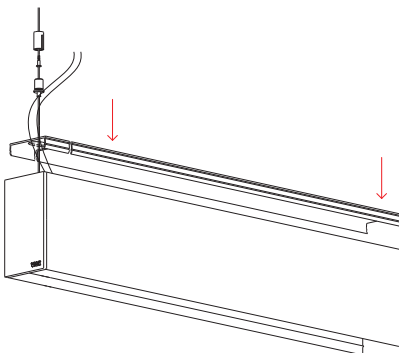

WARNING :

- THE FEEDING VOLTAGE SHOULD NOT EXCEED THE SPECIFIED FIXTURE VOLTAGE.
- DO NOT INSTALL THE FIXTURE IF DAMAGED
- UNAUTHORIZED REPAIRS OR MODIFICATIONS WILL VOID WARRANTY