
### **ZINC BOLLARD**

#### **Product Installation guide**

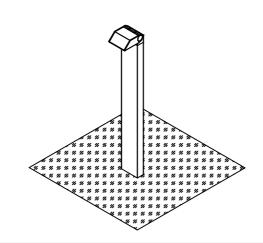











### RISK OF FIRE AND ELECTRICAL SHOCK









- 2. The feeding voltage must not exceed the specified fixture voltage.
- 3. This product must be installed by an eligible electrician.
- 4. Make sure the luminaire is mounted to a secure structure. Failure to mount the fixture correctly could result in serious injury.




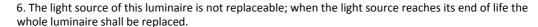

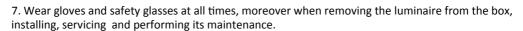




- 8. It is very important not to install a damaged product! This luminaire is properly packed to avoid being damaged during transit. Check for impaired objects before installation. Any damaged or broken item during or after assembly must be replaced.
- 9. Unauthorized repairs or modifications will void warranty.

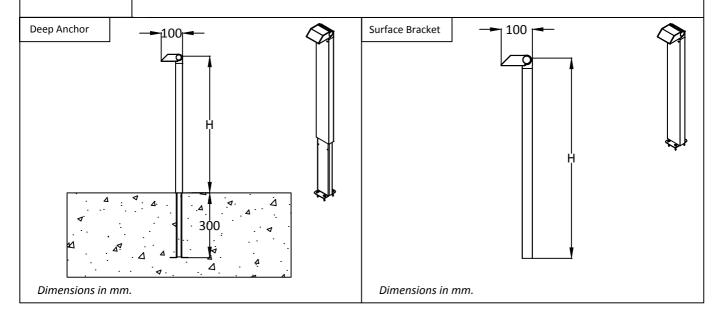



# **ZINC BOLLARD**

#### Product Installation guide

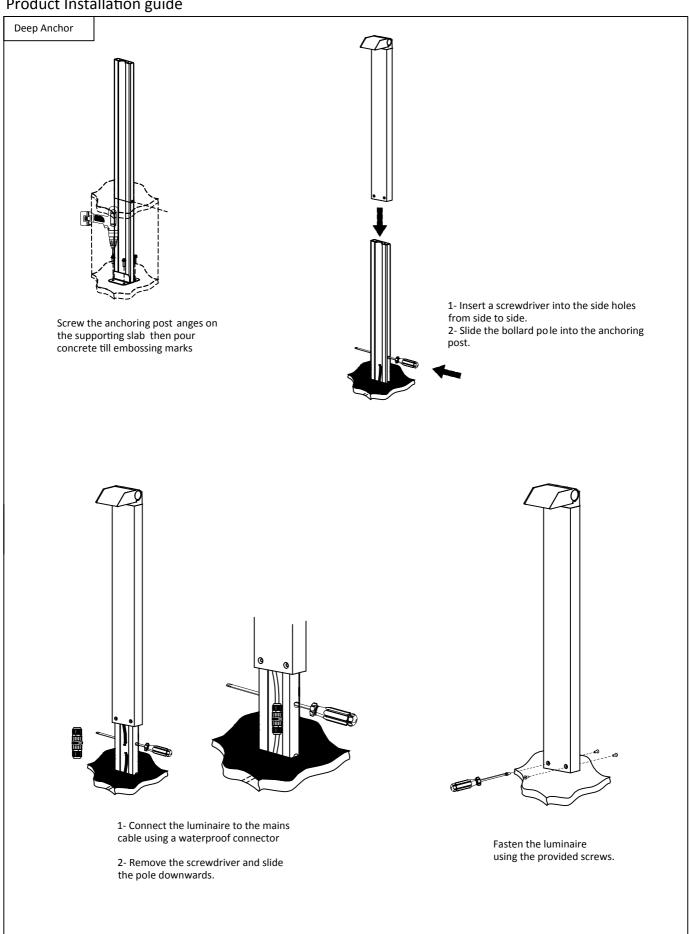





## **ZINC BOLLARD**

### **Product Installation guide**




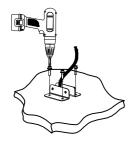

Screw the bracket onto the floor reference. Make sure the main electrical cable is in between the brackets.

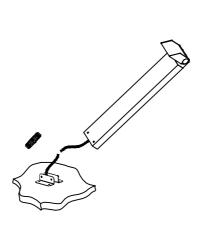

Connect luminaire to main cable using a waterproof connector

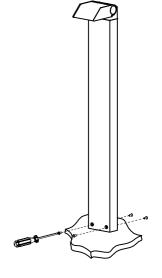

Fasten the luminaire using the provided screws.

#### Wiring

Non dimmable fixtures are attached to a 3 pole cable. The wiring to the main voltage should follow the color code below:

Line : Brown Neutral : Blue

Ground: Yellow/ Green

Dimmable fixtures (DALI or 1-10V) are attached to a 5 pole cable. The wiring to the main voltage should follow the below color code:

Line : Brown Neutral : Blue

Ground: Yellow/ Green

DIM+ : Gray DIM- : Black



