


LIGHTWAY 5 - SURFACE MOUNTED

Product Installation Guide

WARNING:



THE SAFETY OF THIS FIXTURE IS GUARANTEED ONLY WHEN COMPLYING WITH THE FOLLOWING INSTRUCTIONS

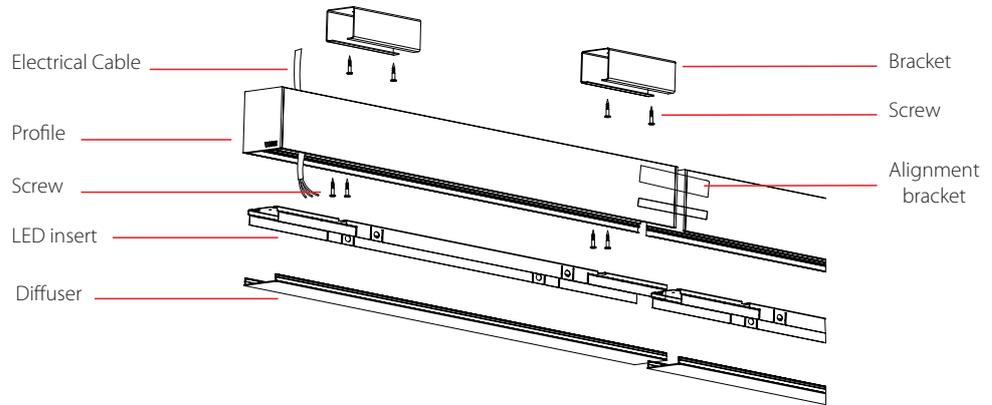

FOLLOW THE BELOW STEPS TO INSURE A PROPER INSTALLATION

STEP 1: Disassemble the luminaire

A - Use the provided scrapper to remove the optic.

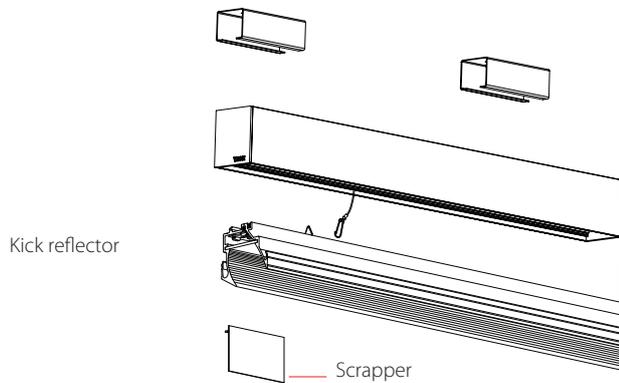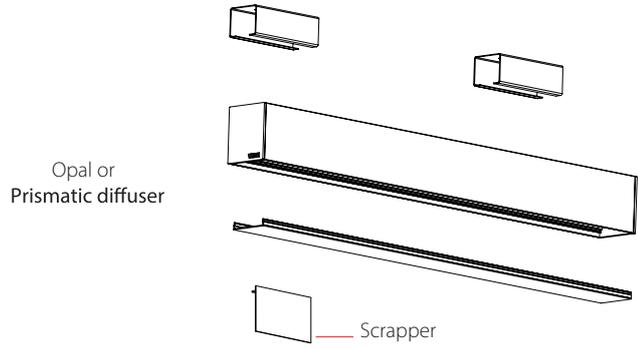

LIGHTWAY 5 - SURFACE MOUNTED

Product Installation Guide

NOTE:

- 1 - Always wear cotton gloves to avoid fingerprints mark on the product.
- 2 - Make sure to place all dismantled items in a safe and clean area to avoid any possible damage.
- 3 - LED should be protected from any possible electrostatic discharge (ESD) source.

STEP 2: Install the profile



Applicable surfaces:

Stone
Concrete
Metal
Wood

Applicable Mounting:

Ceiling
Wall
Floor
Groove


- A - Screw the bracket in the ceiling
- B - Insert the electrical cable into the profile.
- C - Insert the profile and screw it on the bracket.
- D - Connect the mains cable to the input terminal block and control when applicable.

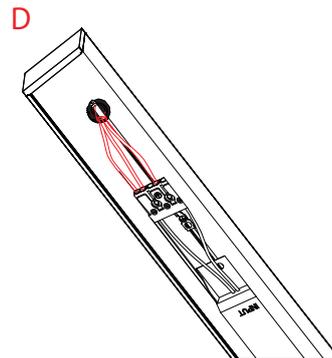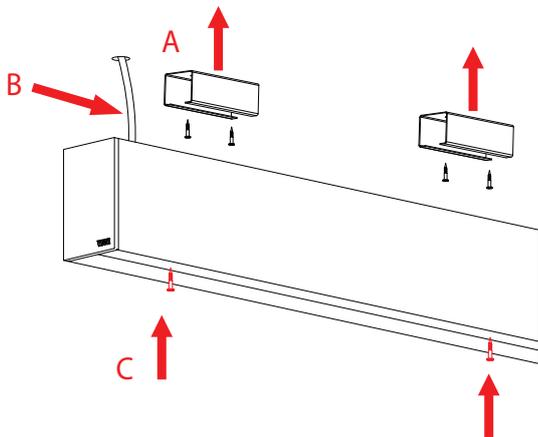

For a continuous run:

Connect the feeding connectors together to provide a through wiring for the power and control when applicable

Fold in the alignment plates on the dotted lines, insert the stems in their allocated slots and screw them to the profile. Unfold the plates to their original position.

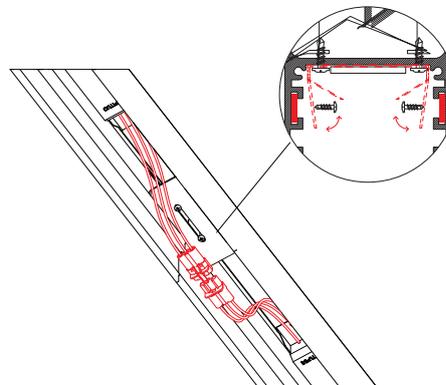

* Apply silicon on the edges of the profile after joining them to fill all gaps and remove light spill.


LIGHTWAY 5 - SURFACE MOUNTED

Product Installation Guide


Note: Make sure not to exceed the maximum allowable running length according to the below table:

Maximum running length through 1 feeding input						
System	Voltage	Power				
		L1 10 W/m	L2 15 W/m	L3 22 W/m	L4 30 W/m	L5 42 W/m
UL	120VAC - 60 Hz	135 ft	100 ft	70 ft	50 ft	36 ft
CE	220VAC - 50/60 Hz	62 m	45 m	33 m	23 m	17 m

Terminal block options :

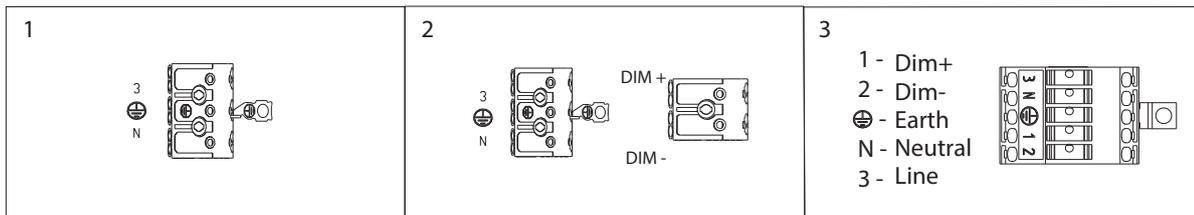

STEP 3: Clip-in the diffuser by making sure to have both markers (optic and Led insert) on the same side for right positioning.

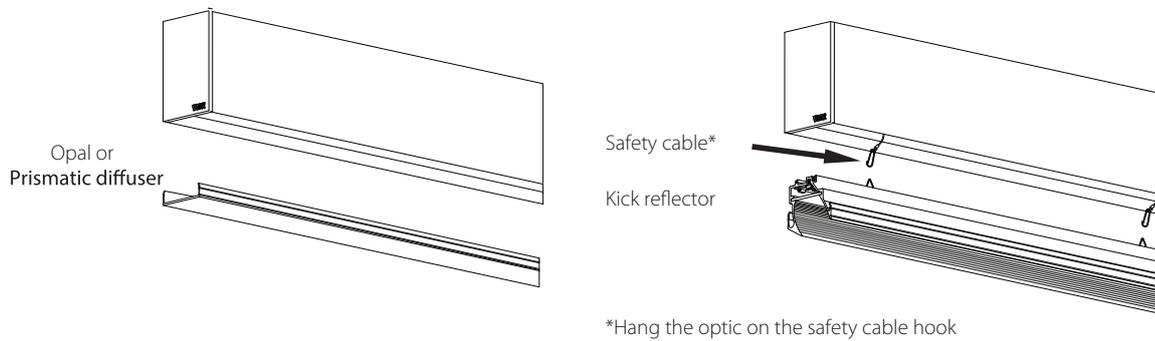

WARNING :

- THE FEEDING VOLTAGE SHOULD NOT EXCEED THE SPECIFIED FIXTURE VOLTAGE.
- DO NOT INSTALL THE FIXTURE IF DAMAGED
- UNAUTHORIZED REPAIRS OR MODIFICATIONS WILL VOID WARRANTY