

Product Installation guide

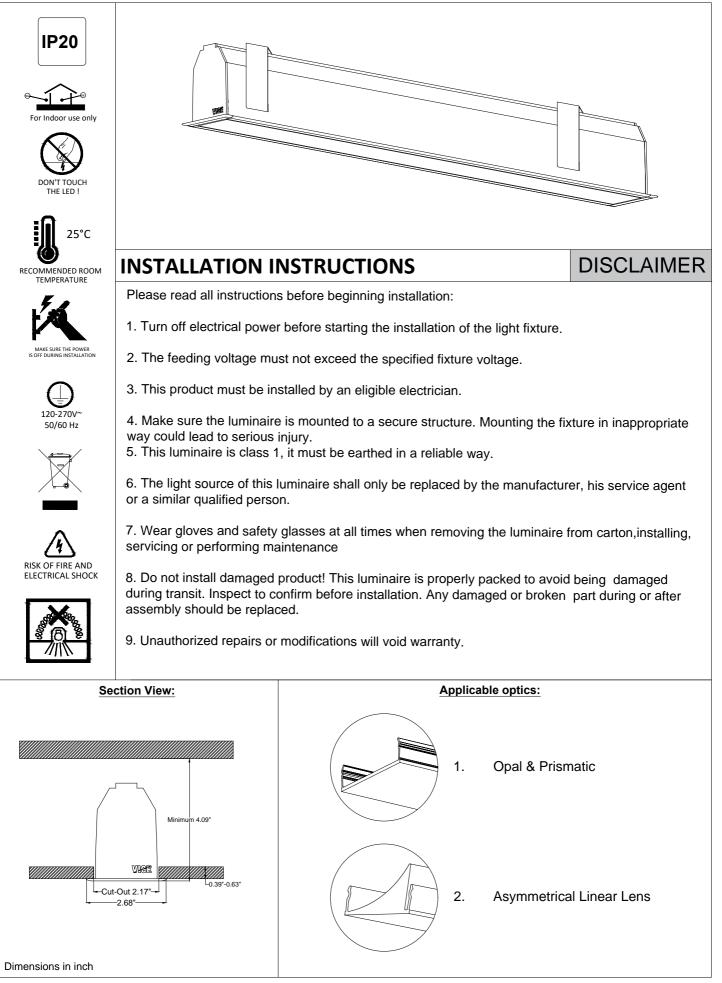


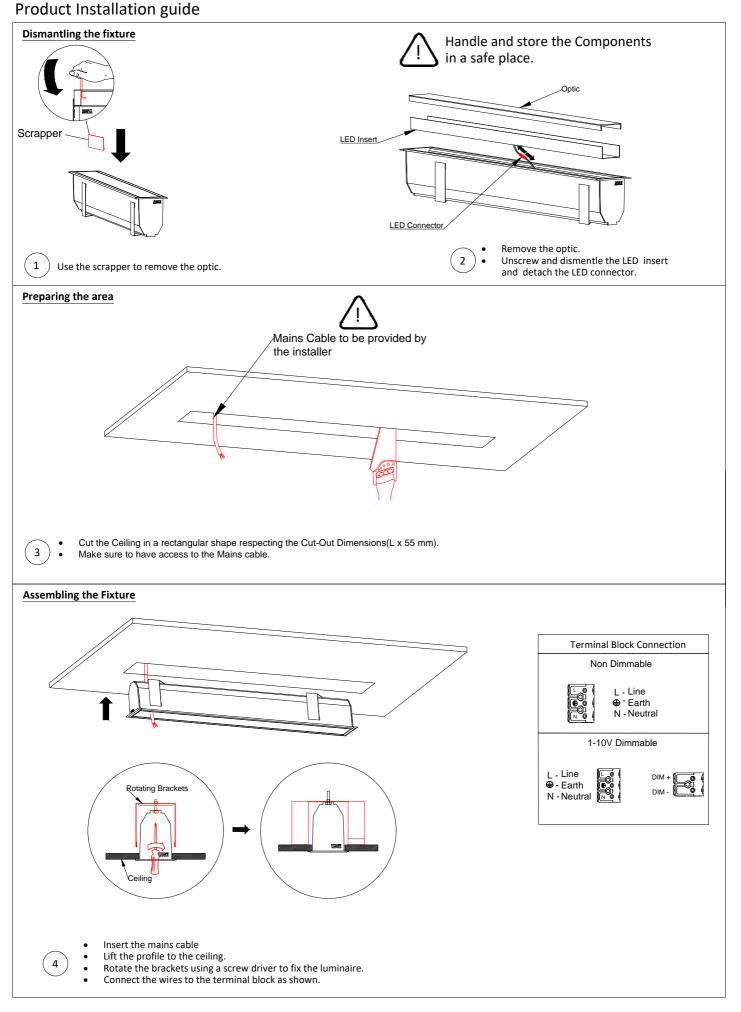





#### Product Installation guide

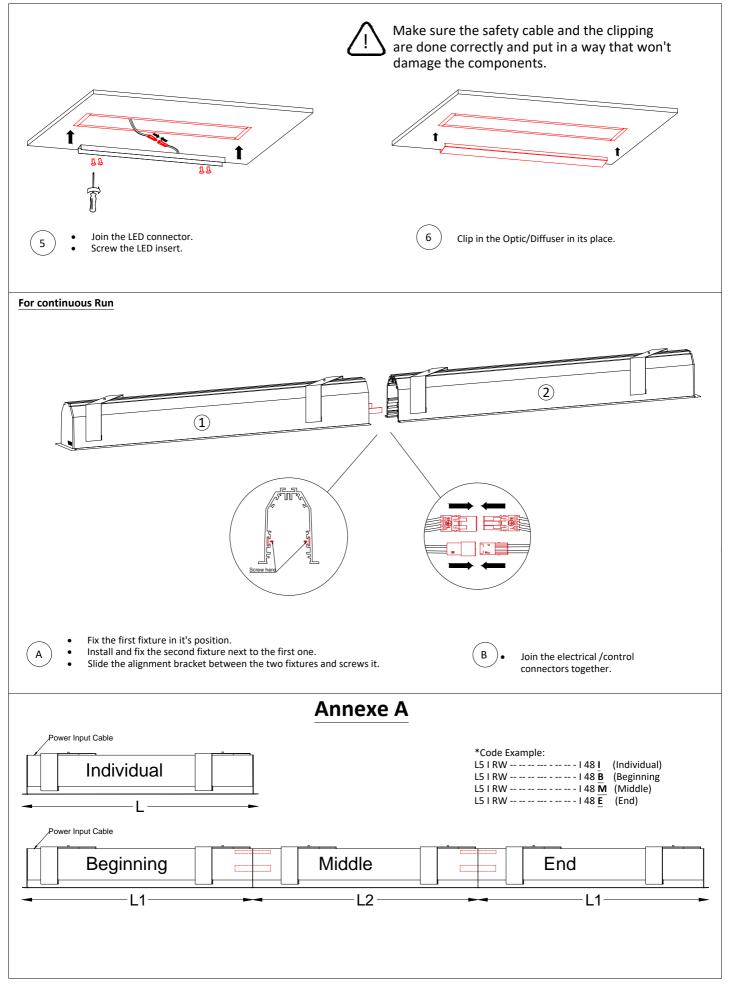



Product Installation guide

Length Code*	L (Inch) (Two End Caps)	L1 (Inch) (One End Cap)	L2 (Inch) (No End Cap)
12	12.52	12.11	11.69
24	24.09	23.68	23.27
36	35.67	35.26	34.84
48	47.24	46.83	46.42
60	58.82	58.41	57.99
70	70.39	69.98	69.57
82	81.97	81.56	81.14
93	93.54	93.13	92.72
105	105.12	104.70	104.29
116	116.69	116.28	115.87

### / <u>|</u> `

For the continuous make sure not to exceed 600W on a single feeding input.

Power feeding location

\*Code Example: L5 | RW -- -- -- -- - - - - - - | 48 -

Annexe B

#### **Asymmetrical optics:**

LED Position

Below section views shows the light direction and the power feeding location for the asymmetrical optic.

Asymmetrical Linear Lens

Light Direction

